





## MAG3110 3-axis magnetometer 10 DFN (2 x 2 x 0.85 mm)

MMA8652FC 3-axis accelerometer 10 DFN (2 x 2 x 1 mm)

MPL3115A2 Pressure sensor 8 LGA (5 x 3 x 1.1 mm)

FXAS21002C 3-axis digital angular rate gyroscope 24 QFN (4 x 4 x 1 mm)

FXOS8700CQ 6-axis linear accelerometer and magnetometer 16 QFN (3 x 3 x 1.2 mm)

FXLS8471Q 3-axis SPI accelerometer 16 QFN (3 x 3 x 1 mm)

MMA9553L Motion-sensing pedometer 16 LGA (3 x 3 x 1 mm)

Verify package contents: • FRDM-FXS-MULT2-B Freescale Freedom development board

Connect the FRDM-FXS-MULT2-B Freescale Freedom development board to a development board, such as the FRDM-K64F (or any Arduino R3 compatible board). Refer to the Freescale Freedom development board Quick Start Guide for driver information.

Plug one end of a USB cable into the SDA port on the assembly. Plug the other end of the cable into the USB port on the computer.


Download and install the latest Sensor Toolbox software at: freescale.com/sensortoolbox

4

5

Start the Sensor Toolbox software.

For more information, go to: freescale.com/sensortoolbox

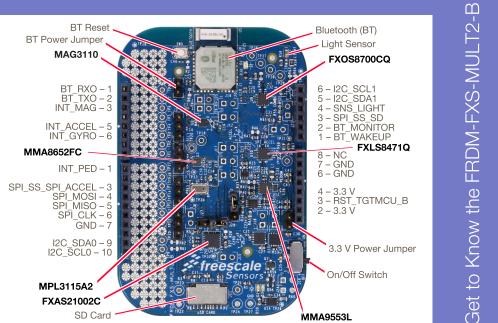

Learn more at freescale.com/sensortoolbox

escale

ð

## **Mouser Electronics**

Authorized Distributor

Click to View Pricing, Inventory, Delivery & Lifecycle Information:

NXP: FRDM-FXS-MULT2-B