

### CTX50 UN-SEALED RECEPTACLE CRIMP TERMINAL

### 1.0 SCOPE


This specification details the crimping information and common practices of general crimps for the Molex CTX50 Un-Sealed Receptacle Terminal. Please refer to sales drawing SD-560023-002 for additional part information. The information in this document is for reference and benchmark purposes only. Customers are required to complete their own validation testing if tooling and/or wire is different than what is shown in this specification.

All measurements are in millimeters and Newton unless specified otherwise.

Terminals shown in this document are generic representations. They are not intended to be an image of any terminal listed in the scope.


### 2.0 PRODUCT DESCRIPTION

### **DEFINITION OF TERMS:**

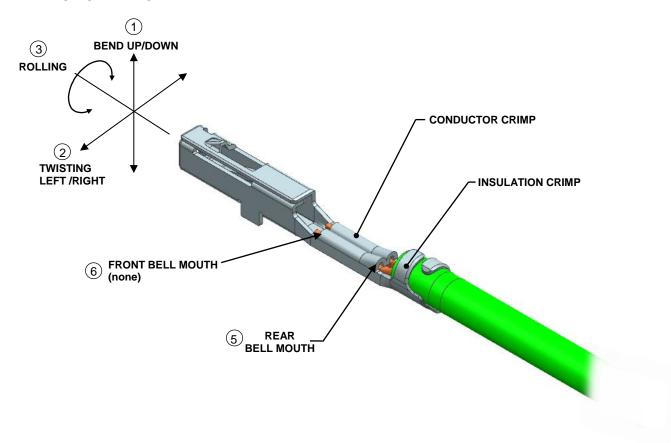

| THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMISSION |                      |              |                                                     |                       |                 |       |                       |  |  |
|------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|--------------|-----------------------------------------------------|-----------------------|-----------------|-------|-----------------------|--|--|
| REVISION:                                                                                                                                      | EC INFORMATION:      | TITLE:       |                                                     |                       |                 |       | SHEET No.             |  |  |
| 1.7                                                                                                                                            | EC No: <b>633932</b> | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |                 |       |                       |  |  |
| K                                                                                                                                              | DATE: 2020/03/23     |              |                                                     | APPLICATION           | N SPEC          |       | <b>1</b> of <b>24</b> |  |  |
| DOCUMENT                                                                                                                                       | NUMBER:              | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY:     | APPRO | OVED BY:              |  |  |
| AS-                                                                                                                                            | 560023-001           | PS           | 001                                                 | RGV                   | SMAHADIK        | JCUAT | ACERVAN               |  |  |
|                                                                                                                                                |                      |              | TEMPLATE FILENAME: APPLICATION                      | DN_SPEC[SIZE          | _A4] (V.4).DOCX |       |                       |  |  |



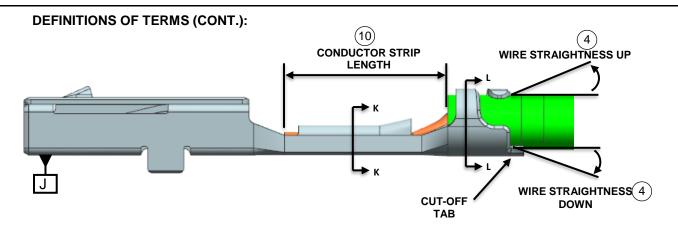

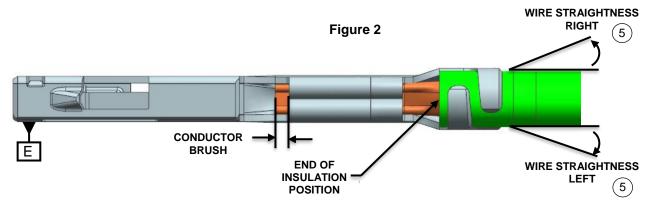


Figure 2

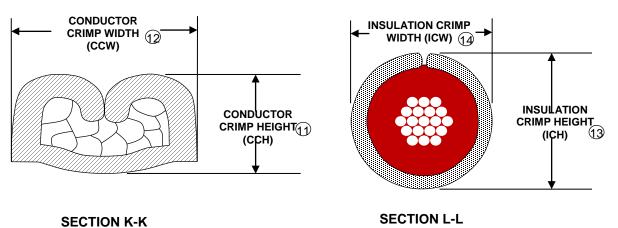


Figure 3


| THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMISS |                      |              |                                    |                       |                                |              |                 |  |  |  |  |
|---------------------------------------------------------------------------------------------------------------------------------------------|----------------------|--------------|------------------------------------|-----------------------|--------------------------------|--------------|-----------------|--|--|--|--|
| <b>REVISION:</b>                                                                                                                            | EC INFORMATION:      | TITLE:       |                                    |                       |                                |              | SHEET No.       |  |  |  |  |
|                                                                                                                                             | EC No: <b>633932</b> | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL |                       |                                |              |                 |  |  |  |  |
| K                                                                                                                                           | DATE: 2020/03/23     |              | APPLICATION SPEC                   |                       |                                |              |                 |  |  |  |  |
| DOCUMENT                                                                                                                                    | ΓNUMBER:             | DOC<br>TYPE: | DOC<br>PART:                       | CREATED / REVISED BY: | CHECKED BY:                    | APPRO        | OVED BY:        |  |  |  |  |
| AS-                                                                                                                                         | PS                   | 001          | RGV                                | SMAHADIK              | JCUAT                          | ACERVAN      |                 |  |  |  |  |
|                                                                                                                                             |                      |              |                                    |                       | TEMPLATE FILENAME: APPLICATION | ON_SPEC[SIZE | _A4] (V.4).DOCX |  |  |  |  |

# molex

# **APPLICATION SPECIFICATION**

## **STRAIGHTNESS** (1)(2)(3)(4)

The crimping process may result in some bending between the conductor crimp and the terminal box. This bending must not exceed the limits shown in **Table 3** 

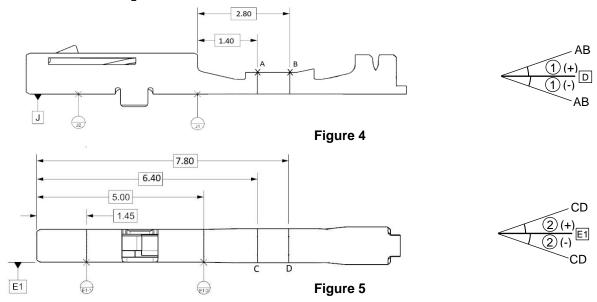

### **BEND UP/DOWN**

To measure bend up/down, establish datum J as shown in Figure 4Error! No document variable supplied. then measure the angle of the line defined by points A and B with respect to the datum. Positive angles are defined as bend up and negative angles are defined as bend down

## TWISTING 2

To measure twisting, establish datum E1 as shown in Figure 5. then measure the angle of the line defined by points C and D with respect to the datum.

# Rolling (3)

To measure rolling, cross section the part  $2.65 \pm 0.50$  mm behind datum F, then clamp the part in a vice as shown in Figure 6. Using a shadowgraph, focus the graph to see the bottom edge of terminal and establish line X. With line X established, refocus the graph to sectioned crimp edge. Measure the angle of the line defined by points E and F with respect to line X.

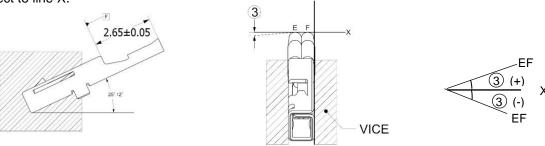


Figure 6


| REVISION:                   | EC INFORMATION: EC No: 633932  DATE: 2020/03/23 | TITLE:<br>CT | E:<br>TX50 UNSEALED RECEPTACLE TERMINAL<br>APPLICATION SPEC |                                          |             |                             |          |  |  |  |  |
|-----------------------------|-------------------------------------------------|--------------|-------------------------------------------------------------|------------------------------------------|-------------|-----------------------------|----------|--|--|--|--|
| DOCUMENT NUMBER:  DOC TYPE: |                                                 |              |                                                             | CREATED / REVISED BY:                    | CHECKED BY: |                             | DVED BY: |  |  |  |  |
| AS-                         | PS                                              | 001          | RGV                                                         | SMAHADIK  TEMPLATE FILENAME: APPLICATION |             | ACERVAN<br>E_A4] (V.4).DOCX |          |  |  |  |  |

THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMISSION.




# BELLMOUTH (FLARE) 69 60 60 7

The flare that is formed on the edge of the conductor crimp acts as a funnel for the wire strands. This funnel reduces the possibility that a sharp edge on the conductor crimp will cut or nick the wire strands. A rear bellmouth is required on the conductor crimp. CAUTION: Excessively large/small bellmouth may affect mechanical / electrical performance. See Table 3 for bellmouth specifications.

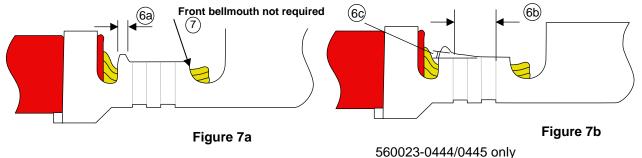


# CUT-OFF TAB 89 89

This is the material that protrudes outside the insulation crimp after the terminal is separated from the carrier strip. A cut-off tab that is too long may expose a terminal outside the housing; it may fail electrical spacing requirements. See Table 3 for cut-off tab length specifications.

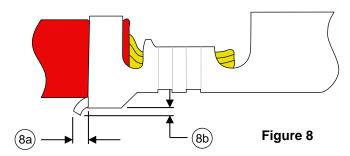

# **CONDUCTOR BRUSH** (9a) (9b)

The conductor brush is made up of the wire strands that extend past the conductor crimp into the transition area towards the terminal box. This helps ensure that mechanical compression occurs over the full length of the conductor crimp. The conductor brush should not extend past the transition area into the terminal box or above the conductor crimp/transition wall height (whichever is tallest). CAUTION: Excessive conductor brush extended above the transition/crimp area can cause terminal retention issues inside plastic cavity.

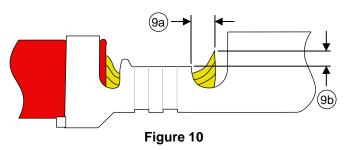

| THIS DOCUME      | NT CONTAINS INFORMATION THAT IS | PROPRIETA    | ARY TO MOL                                          | EX ELECTRONIC TECHNOLOGIES, LLC | AND SHOULD NOT BE USED WITHO   | OUT WRITTEN  | PERMISSION.     |  |  |  |
|------------------|---------------------------------|--------------|-----------------------------------------------------|---------------------------------|--------------------------------|--------------|-----------------|--|--|--|
| <b>REVISION:</b> | EC INFORMATION:                 | TITLE:       |                                                     |                                 |                                |              | SHEET No.       |  |  |  |
|                  | EC No: <b>633932</b>            | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                                 |                                |              |                 |  |  |  |
| K                | DATE: 2020/03/23                |              |                                                     |                                 |                                |              |                 |  |  |  |
| DOCUMENT         | ΓNUMBER:                        | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY:           | CHECKED BY:                    | APPRO        | OVED BY:        |  |  |  |
| AS-              | AS-560023-001                   |              |                                                     | RGV                             | SMAHADIK                       | JCUAT        | ACERVAN         |  |  |  |
|                  |                                 |              |                                                     |                                 | TEMPLATE FILENAME: APPLICATION | DN_SPEC[SIZE | _A4] (V.4).DOCX |  |  |  |



## **CONDUCTOR STRIP LENGTH** (10)

The strip length is determined by measuring the exposed conductor strands after the insulation is removed. The strip length determines the conductor brush length when the end-of-insulation position is centered in the transition area between conductor and insulation crimps. See Table 3 for the length requirement

**CAUTION**: Care must be taken to ensure that all conductor strands are equal in length (no diagonally cut strands). No scratched or missing strands are permitted. The insulation cut must be uniform (no diagonally cut insulation and no extrusions of insulation).

### CONDUCTOR CRIMP

This is the metallurgical compression of a terminal around the wire's conductor. This connection creates a common electrical path with low resistance and high current carrying capabilities.

## CONDUCTOR CRIMP HEIGHT/WIDTH 1112

The conductor crimp height is measured from the top surface of the formed crimp to the bottom most radial surface. The conductor crimp width is measured across the widest portion of the crimp. Do not include the extrusion points in these measurements. Measuring crimp height/width is a quick, non-destructive way to help ensure the correct metallurgical compression of a terminal around the wire's conductor and is an excellent attribute for process control. The crimp height/width specification is typically set as a balance between electrical and mechanical performance over the complete range of wire stranding and coatings, and terminal materials and plating. Although it is possible to optimize a crimp height/width to individual wire strands and terminal plating, one crimp height/width specification is normally created. See Table 2 for crimp height/width specifications.

## **INSULATION CRIMP HEIGHT/WIDTH** (13) (14)

Insulation crimp heights/widths are specified in **Table 2**. CTX50 Un-Sealed Receptacle Terminals are designed to accommodate multiple wire sizes. Although within the terminal range, an insulation grip may not completely surround the wire, an acceptable insulation crimp will still be provided.

The insulation crimp should be visually evaluated to confirm it provides adequate compression on the wire. It should also be evaluated by sectioning through the center of the crimped insulation grip. The grip should compress the insulation but not pierce it or otherwise damage the integrity of the insulation. The grip should not contact the conductors under any circumstance. Mechanically, the insulation grip should withstand repeated flexing of the wire as shown in Figure 7 without pulling out of the grip. The wire is flexed 5 times each in two perpendicular planes in the following sequence: b to a, a to b, b to c, c to b, then repeat (see Figure 7).

Once the optimum setting for an insulation crimp height is determined, it is important to document it. The operator can then check it as part of the setup procedure.

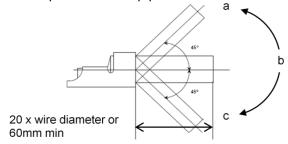


Figure 7

| REVISION: | EC INFORMATION:      | TITLE:       |                                    |                       |                                |              | SHEET No.             |  |  |  |
|-----------|----------------------|--------------|------------------------------------|-----------------------|--------------------------------|--------------|-----------------------|--|--|--|
|           | EC No: <b>633932</b> | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL |                       |                                |              |                       |  |  |  |
| K         | DATE: 2020/03/23     |              |                                    | APPLICATION           | N SPEC                         |              | <b>5</b> of <b>24</b> |  |  |  |
| DOCUMENT  | Γ NUMBER:            | DOC<br>TYPE: | DOC<br>PART:                       | CREATED / REVISED BY: | CHECKED BY:                    | APPRO        | OVED BY:              |  |  |  |
| AS-       | 560023-001           | PS           | 001                                | RGV                   | SMAHADIK                       | JCUAT        | ACERVAN               |  |  |  |
|           |                      |              |                                    |                       | TEMPLATE FILENAME: APPLICATION | DN_SPEC[SIZE | _A4] (V.4).DOCX       |  |  |  |

THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES. LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMISSION.



# CONDUCTOR ANVIL FLASH (EXTRUSIONS / BURR) (15a) (15b)

These are the small flares that form on the bottom of the conductor crimp resulting from the clearance between the punch and anvil tooling. If the anvil is worn or the terminal is over-crimped, excessive extrusion can result.

An uneven extrusion may also result if the punch and anvil are misaligned, if the feed is misadjusted or if there is insufficient or excessive terminal drag (see Figure 8 and Table 3).

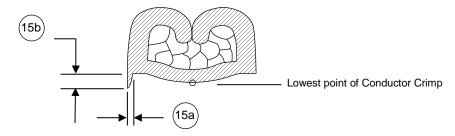


Figure 8

# INSULATION AND CONDUCTOR GRIP STEP $^{\textcircled{16}}$ $^{\textcircled{17}}$

The insulation grip step is the designed offset between the conductor grip and the insulation grip which must be met by the crimp process (see Figure 9 and Table 3).

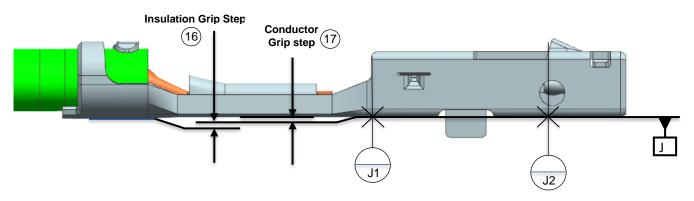


Figure 9

### **END-OF-INSULATION POSITION**

This is the location of the insulation in relation to the transition area between the conductor and insulation crimps. Equal amounts of the conductor strands and insulation needs to be visible in the transition area. The end-of insulation position ensures that the insulation is crimped along the full length of the insulation crimp and that no insulation gets crimped under the conductor crimp. The end-of-insulation position is set by the wire stop and strip length for bench applications. For automatic wire processing applications, the end-of-insulation position is set by the in/out press adjustment (see Figure 2).

| THIS DOCUME      | NT CONTAINS INFORMATION THAT IS | PROPRIETA    | RY TO MOL                                           | EX ELECTRONIC TECHNOLOGIES, LLC | AND SHOULD NOT BE USED WITHO   | OUT WRITTEN  | PERMISSION.     |  |  |  |
|------------------|---------------------------------|--------------|-----------------------------------------------------|---------------------------------|--------------------------------|--------------|-----------------|--|--|--|
| <b>REVISION:</b> | EC INFORMATION:                 | TITLE:       |                                                     |                                 |                                |              | SHEET No.       |  |  |  |
|                  | EC No: <b>633932</b>            | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                                 |                                |              |                 |  |  |  |
| K                | DATE: 2020/03/23                |              |                                                     |                                 |                                |              |                 |  |  |  |
| DOCUMENT         | ΓNUMBER:                        | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY:           | CHECKED BY:                    | APPRO        | OVED BY:        |  |  |  |
| AS-              | AS-560023-001                   |              |                                                     | RGV                             | SMAHADIK                       | JCUAT        | ACERVAN         |  |  |  |
|                  |                                 |              |                                                     |                                 | TEMPLATE FILENAME: APPLICATION | DN_SPEC[SIZE | _A4] (V.4).DOCX |  |  |  |




## WING DISSYMMETRY (18)

Wing dissymmetry is the crimped offset between the ends of core wings (see Figure 10 and Table 3).

## SPACE BETWEEN WING TIPS AND CRIMP BOTTOM (19)

The space between the crimp wing tips and the bottom of the crimp is designed to assure no contact between wing tips and the crimp bottom. Shortest distance is measured. (See Figure 10 and Table 3).

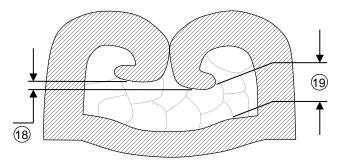


## **CRIMP BULGE**



Figure 10

Caution needs to be taken with the crimp tooling to prevent a bulge in the transition area during crimping. The transition should generally flow smoothly from the conductor crimp to the terminal box. Any bulge must not exceed the width shown in Table 3. See Figure 11 for an example of crimp bulge.





Good Crimp (No Bulge)

Bad Crimp (Bulge)

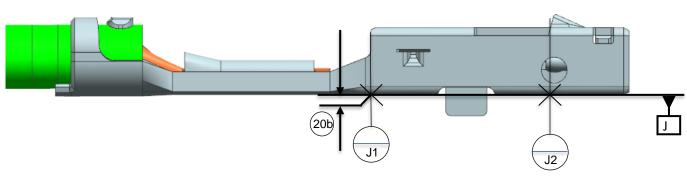


Figure 11

| THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMISS |                         |              |                                                     |                       |                                |              |                 |  |  |  |
|---------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|--------------|-----------------------------------------------------|-----------------------|--------------------------------|--------------|-----------------|--|--|--|
| <b>REVISION:</b>                                                                                                                            | EC INFORMATION:         | TITLE:       |                                                     |                       |                                |              | SHEET No.       |  |  |  |
|                                                                                                                                             | EC No: <b>633932</b>    | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |                                |              |                 |  |  |  |
| K                                                                                                                                           | DATE: <b>2020/03/23</b> |              |                                                     |                       |                                |              |                 |  |  |  |
| DOCUMENT                                                                                                                                    | ΓNUMBER:                | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY:                    | APPRO        | OVED BY:        |  |  |  |
| AS-                                                                                                                                         | PS                      | 001          | RGV                                                 | SMAHADIK              | JCUAT                          | ACERVAN      |                 |  |  |  |
|                                                                                                                                             |                         |              |                                                     |                       | TEMPLATE FILENAME: APPLICATION | ON_SPEC[SIZE | _A4] (V.4).DOCX |  |  |  |




### **BOX DEFORMATION**

Care must be taken to ensure that the terminal box is not deformed during crimping and handling. Any deformation of the terminal box must not exceed the tolerances specified in sales drawing

### **WIRE CONDITION AFTER CRIMP**

The wire, after crimping, should not have any scratches, grooves or dents. At a minimum, check the condition of the wire on a sample length of 26mm as shown in Figure 12.



No scratches, grooves or dents permitted on this region of the wire after crimping

Figure 12

## 3.0 PRODUCT SPECIFICATIONS

### Table 1

| Terminal | Gender     | Sealing  | Part Number      | Plating | Special Characteristics | Grip | Wire Size                   | Insulation Diameter |
|----------|------------|----------|------------------|---------|-------------------------|------|-----------------------------|---------------------|
| Family   | Gender     | Sealing  | Part Number      | Flating | Special Characteristics | Code | VVII e 312e                 | Range (mm)          |
|          |            |          | 560023-0444/0445 | Sn      | Standard Performance Sn | c    | 0.13mm <sup>2</sup> / 26AWG | 0.75 - 1.05         |
|          |            |          | 560023-0544/0545 | Au      | Standard Performance Au | ٦    | 0.13mm <sup>2</sup> / 26AWG | 0.75 - 1.05         |
| CTX50    | Receptacle | Unsealed | 560023-0421/0423 | Sn      | Standard Performance Sn | М    | 0.22mm <sup>2</sup> / 24AWG | 0.95 -1.05          |
|          |            |          | 560023-0448/0450 | Sn      | Standard Performance Sn |      | 0.35mm <sup>2</sup> / 22AWG | 1.10 - 1.40         |
|          |            |          | 560023-0548/0550 | Au      | Standard Performance Au |      | 0.35mm <sup>2</sup> / 22AWG | 1.10 - 1.40         |

| THIS DOCUME | NT CONTAINS INFORMATION THAT IS | PROPRIETA    | ARY TO MOL                                          | EX ELECTRONIC TECHNOLOGIES, LLC | AND SHOULD NOT BE USED WITHO   | OUT WRITTEN  | PERMISSION.     |  |  |  |
|-------------|---------------------------------|--------------|-----------------------------------------------------|---------------------------------|--------------------------------|--------------|-----------------|--|--|--|
| REVISION:   | EC INFORMATION:                 | TITLE:       |                                                     |                                 |                                |              | SHEET No.       |  |  |  |
|             | EC No: <b>633932</b>            | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                                 |                                |              |                 |  |  |  |
| K           | DATE: 2020/03/23                |              |                                                     |                                 |                                |              |                 |  |  |  |
| DOCUMENT    | ΓNUMBER:                        | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY:           | CHECKED BY:                    | APPRO        | OVED BY:        |  |  |  |
| AS-         | AS-560023-001                   |              |                                                     | RGV                             | SMAHADIK                       | JCUAT        | ACERVAN         |  |  |  |
|             |                                 |              |                                                     |                                 | TEMPLATE FILENAME: APPLICATION | DN_SPEC[SIZE | _A4] (V.4).DOCX |  |  |  |



### Table 2

|                  | Molex Product                        | Attribute                 |                                            | Validated Wir                   | е                 |                           | Conduct          | or Crimp         | Insulatio        | on Crimp         | Pull Force     |
|------------------|--------------------------------------|---------------------------|--------------------------------------------|---------------------------------|-------------------|---------------------------|------------------|------------------|------------------|------------------|----------------|
| Grip<br>Siz<br>e | Left Payoff<br>'D-Wind'<br>(Default) | Right Payoff<br>'B-Wind'  | Size                                       | Туре                            | No. of<br>Strands | Insulation<br>Max OD (mm) | CCH<br>(±0.03mm) | CCW<br>(±0.03mm) | ICH<br>(±0.05mm) | ICW<br>(±0.05mm) | Minimum<br>(N) |
| S                | 560023-0444                          | 560023-0445               | 0.13mm <sup>2</sup>                        | FLCUSN03RY <sup>1,a,b,c,d</sup> | 7                 | 1.10                      | 0.53             | 0.00             | 4.00             | 4.40             | 50             |
| 5                | 560023-0544                          | 560023-0545               | 0.13mm <sup>2</sup>                        | FLCUSN03RY <sup>2,a,b,c,d</sup> | 7                 | 1.10                      | 0.56             | 0.83             | 1.20             | 1.10             | 40             |
|                  | 560023-0421                          | 560023-0423               | 0.22mm <sup>2</sup>                        | CHFUS <sup>3,d,e</sup>          | 7                 | 1.05                      | 0.69             | 4.04             | 4.05             | 4.45             | 40             |
| М                | 560023-0421                          | 560023-0423               | 24AWG                                      | UL1332 <sup>2,f</sup>           | 19                | 1.35                      | 0.69             | 1.04             | 1.25             | 1.15             | 40             |
|                  |                                      |                           | 0.35mm <sup>2</sup>                        | FLR2X A3ZH <sup>1,a,d,e,g</sup> | 7                 | 1.40                      | 0.67±0.02        |                  |                  |                  | .,             |
|                  | 0.35mm <sup>2</sup>                  | FLR13Y-A <sup>4,c,h</sup> |                                            |                                 |                   |                           |                  |                  |                  |                  |                |
|                  |                                      |                           | 0.35mm <sup>2</sup>                        | A3Z <sup>5,d,g,i</sup>          | 7                 | 1.35                      | 0.61±0.02        |                  |                  |                  |                |
|                  |                                      | 0.35mm <sup>2</sup>       | *FTP:<br>00949_10_00766 <sup>6,d,g,L</sup> | 7                               | 1.35              | 0.67±0.02                 |                  |                  |                  |                  |                |
|                  |                                      |                           | 0.35mm <sup>2</sup>                        |                                 | 7                 | 1.30                      | 0.67±0.02        |                  |                  |                  |                |
| L                |                                      |                           | 22AWG                                      | UL10086 <sup>2,e,j,k</sup>      | 19                | 1.40                      | 0.65±0.02        | 1.04             | 1.53             | 1.38             | 50             |
| _                |                                      |                           | 22AWG                                      | UL10316 <sup>2</sup>            | 19                | 1.30                      | 0.71±0.02        | 1.04             | 1.55             | 1.30             | 50             |
|                  |                                      |                           | 22AWG                                      | UL10588 <sup>2</sup>            | 19                | 1.27                      | 0.65±0.02        |                  |                  |                  |                |
|                  |                                      |                           | 0.35mm <sup>2</sup>                        | FLR2X A3ZH <sup>2,a,d,e,g</sup> | 7                 | 1.40                      | 0.67±0.02        |                  |                  |                  |                |
|                  | 550000 0540                          | 550000 0550               | 22AWG                                      | UL10086 <sup>2,e,j,k</sup>      | 19                | 1.40                      | 0.65±0.02        |                  |                  |                  |                |
|                  | 560023-0548                          | 560023-0550               | 22AWG                                      | UL10316 <sup>2</sup>            | 19                | 1.30                      | 0.71±0.02        |                  |                  |                  |                |
|                  |                                      |                           | 22AWG                                      | UL10588 <sup>2</sup>            | 19                | 1.27                      | 0.65±0.02        |                  |                  |                  |                |

<sup>\* 0.35</sup>mm² FTP: 00949\_10\_00766 wire is equivalent to 0.35mm² T3ZHID wire

The above specifications are guidelines for an optimum crimp. Crimp heights/widths are applicable for punch/anvil tooling shown in Figures 15-25.

Pull force should be measured with no influence from the insulation crimp.

Customers are required to complete their own validation testing if tooling and/or wire is different than what is shown in this specification.

Terminal crimps are validated to the following specifications:

Wires are in accordance with following specifications:

<sup>a</sup> GMW15626 d ISO 6722 g DIN EN13602 REACH <sup>m</sup>LV112-1, LV 216-1

Ford ES-BR-1A348-AA hVW60330 k FDA c LV 112-4 f UL758, UL1581 RSA 36-05-009/L LB25 11 10

| REVISION: | EC INFORMATION: EC No: 633932  DATE: 2020/03/23 | TITLE:<br>CT | X50 U        | INSEALED RECEI        |                                | NAL          | 9 of <b>24</b>  |
|-----------|-------------------------------------------------|--------------|--------------|-----------------------|--------------------------------|--------------|-----------------|
| DOCUMENT  | NUMBER:                                         | DOC<br>TYPE: | DOC<br>PART: | CREATED / REVISED BY: | CHECKED BY:                    | APPRO        | OVED BY:        |
| AS-       | PS                                              | 001          | RGV          | SMAHADIK              | JCUATA                         | ACERVAN      |                 |
|           |                                                 |              |              |                       | TEMPLATE FILENAME: APPLICATION | ON_SPEC[SIZE | _A4] (V.4).DOCX |

THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMISSION.

<sup>&</sup>lt;sup>1</sup>USCAR-21, Revision-3, Nov-2014; Sections 4.3, 4.4 & 4.5.2

<sup>&</sup>lt;sup>2</sup>USCAR-21, Revision-3, Nov-2014; Sections 4.3 & 4.5.2

<sup>&</sup>lt;sup>3</sup> PSA STE 96 34115099 Rev. 2007-2008; Sections 5.6.4, 5.6.5.2, 5.6.5.4, 5.6.6.1, 5.6.6.2, 5.6.7.1

<sup>&</sup>lt;sup>4</sup> AK LV214, Mar 2010; Sections PG0 & PG10. VW 60330 Section 4.3.4 & VW 75174-2 Section 3.4

<sup>&</sup>lt;sup>5</sup> RSA 36-05-019 Rev J

<sup>&</sup>lt;sup>6</sup> PSA STE 96 34115099 Rev. 2007-2008; Sections 4.3.5.3, 5.6.4, 5.6.5.1, 5.6.5.2, 5.6.5.4, 5.6.6.2, 5.6.7.1

<sup>&</sup>lt;sup>7</sup> RNDS-B-00029 v2.0 24012NDS07 36-05-019-L; Sections 13.1, 13.2, 13.3, 13.4, 13.5



# **molex** APPLICATION SPECIFICATION

### Table 3

| _ |   |   |    |   |    |    |   |   |   |
|---|---|---|----|---|----|----|---|---|---|
|   | n | Δ | cı | • | ca | tı | ^ | n | c |
|   | ν | _ | u  | ш | Ca | u  | v | ш | J |

| Balloon # | Feature                                        | Requirement                |                                                        |  |
|-----------|------------------------------------------------|----------------------------|--------------------------------------------------------|--|
| 1         | Bend Up/Down                                   |                            | 1° MAX                                                 |  |
| 2         | Twisting Left/Right                            |                            | 2° MAX                                                 |  |
| 3         | Rolling                                        | N/A                        |                                                        |  |
| 4         | Wire Straightness Up/Down from datum J         |                            | 3° MAX                                                 |  |
| 5         | Wire Straightness Left/Right from datum E      |                            | 3° MAX                                                 |  |
|           |                                                | Grip Code S                | 0.30 MAX                                               |  |
| 6a        | Rear Bell Mouth                                | Grip Code M                | 0.50 ± 0.10                                            |  |
| Va        | Real Bell Wouth                                | Grip Code L                | 0.70 ± 0.10                                            |  |
|           |                                                | Grip Code XL               | 0.55 ± 0.10                                            |  |
| 6b        | Conductor Crimp Angle Horizontal Length        | Grip Code S                | 1.50 ± 0.50                                            |  |
| 6c        | Conductor Crimp Angle                          | Grip Code S                | 7.5° ± 2.5°                                            |  |
| 7         | Front Bell Mouth                               |                            | None                                                   |  |
| 8a        | Cut-Off Tab                                    |                            | 0.30 MAX                                               |  |
| 8b        | Cut-Off Tab                                    |                            | No burrs                                               |  |
| 9a        | Conductor Brush                                |                            | 0.55 MAX                                               |  |
| 9b        | Conductor Brush                                |                            | Not to extend above conductor crimp/ transition height |  |
|           | Conductor Strip Length                         | 0.13mm <sup>2</sup> wire   | 3.6 for reference                                      |  |
| 10        |                                                | 0.22mm <sup>2</sup> wire   | 2.9 for reference                                      |  |
| 10        |                                                | 0.35mm <sup>2</sup> wire   | 3.1 for reference                                      |  |
|           |                                                | 0.50mm <sup>2</sup> wire   | 3.1 for reference                                      |  |
| 11        | Conductor Crimp Height                         |                            | See Table 2                                            |  |
| 12        | Conductor Crimp Width                          |                            | See Table 2                                            |  |
| 13        | Insulation Crimp Height                        |                            | See Table 2                                            |  |
| 14        | Insulation Crimp Width                         |                            | See Table 2                                            |  |
| 15a       | Conductor Anvil Flash                          |                            | 0.10 MAX                                               |  |
| 15b       | Conductor Anvirriasii                          |                            | 0.10 MAX                                               |  |
| 16        | Insulation Grip Step From J1-J2 (see Figure 9) | Grip Codes S and M         | 0.00 ± 0.05                                            |  |
| 10        | misulation only step from 31-32 (see Figure 3) | Grip Code L and XL         | 0.03 ± 0.05                                            |  |
| 17        | Conductor Grip Step From J1-J2 (see Figure 9)  |                            | $0.00 \pm 0.05$                                        |  |
| 18        | Wing Dissymmetry                               |                            | 0.20 MAX                                               |  |
| 19        | Space Between Wing Tips and Crimp Bottom       | Wire ≤ 0.22mm <sup>2</sup> | No contact                                             |  |
| -17       | opace between wing rips and crimp bottom       | Wire ≥ 0.35mm <sup>2</sup> | 0.10 MIN                                               |  |
| 20a       | Crimp Bulge                                    | Grip Codes S, M, L and XL  | 1.07 MAX                                               |  |
| 20b       | ormip builde                                   | Grip Code S                | 0.10 MAX                                               |  |

| THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMI |                                           |              |                                                     |                       |                 |        |           |  |
|-------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|--------------|-----------------------------------------------------|-----------------------|-----------------|--------|-----------|--|
| <b>REVISION:</b>                                                                                                                          | EC INFORMATION:                           | TITLE:       |                                                     |                       |                 |        | SHEET No. |  |
|                                                                                                                                           | EC No: <b>633932</b>                      | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |                 |        |           |  |
| K                                                                                                                                         | DATE: 2020/03/23                          |              |                                                     |                       |                 |        |           |  |
| DOCUMENT                                                                                                                                  | NUMBER:                                   | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY:     | APPRO  | OVED BY:  |  |
| AS-560023-001                                                                                                                             |                                           | PS           | 001                                                 | RGV                   | SMAHADIK        | JCUATA | ACERVAN   |  |
|                                                                                                                                           | TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_ |              |                                                     |                       | _A4] (V.4).DOCX |        |           |  |



### **4.0 REFERENCE DOCUMENTS**

Reference documentation for general practices is located on the website per the below links:

- 1. Molex Quality Crimping Handbook <a href="http://www.molex.com/images/products/apptool/qual\_crimp.pdf">http://www.molex.com/images/products/apptool/qual\_crimp.pdf</a>
- 2. Molex-Recognizing Good Crimps <a href="http://www.molex.com">http://www.molex.com</a>, search for Application Tooling

### **5.0 PROCEDURE**

# 5.1 GENERAL MEASUREMENT AND EVALUATION REQUIREMENTS Crimp Height Measurement (Anvil Flash Evaluation)

- 1. Complete tool set-up procedure.
- 2. Crimp a minimum of 5 samples.
- 3. Place the flat blade of the crimp micrometer across the center of the dual radii of the conductor crimp. Do not take the measurement near the conductor bell mouth (see Figure 13).
- 4. Rotate the micrometer dial until the point contacts the bottom most radial surface. If using a caliper, be certain not to measure the conductor anvil flash (extrusions) of the crimp (see Figure 14).

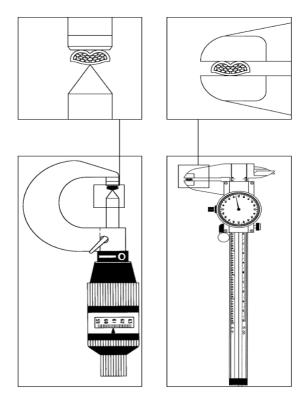


Figure 13


Figure 14

### **6.0 CRIMP TOOLING GEOMETRY**

The crimp tooling information shown below defines the tooling used by Molex to perform validation testing to establish recommended crimp height and widths. The user is responsible for validating crimp performance based on tooling, equipment and wire that is being used.


| THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMI |                         |        |                                    |                       |                                |              |                 |  |  |
|-------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|--------|------------------------------------|-----------------------|--------------------------------|--------------|-----------------|--|--|
| REVISION:                                                                                                                                 | EC INFORMATION:         | TITLE: |                                    |                       |                                |              | SHEET No.       |  |  |
|                                                                                                                                           | EC No: <b>633932</b>    | CT     | CTX50 UNSEALED RECEPTACLE TERMINAL |                       |                                |              |                 |  |  |
| K                                                                                                                                         | DATE: <b>2020/03/23</b> |        | APPLICATION SPEC                   |                       |                                |              |                 |  |  |
| DOCUMENT                                                                                                                                  | DOCUMENT NUMBER:        |        |                                    | CREATED / REVISED BY: | CHECKED BY:                    | APPR(        | OVED BY:        |  |  |
| AS-560023-001                                                                                                                             |                         | PS     | 001                                | RGV                   | SMAHADIK                       | JCUAT        | ACERVAN         |  |  |
|                                                                                                                                           |                         |        |                                    |                       | TEMPLATE FILENAME: APPLICATION | DN_SPEC[SIZE | _A4] (V.4).DOCX |  |  |



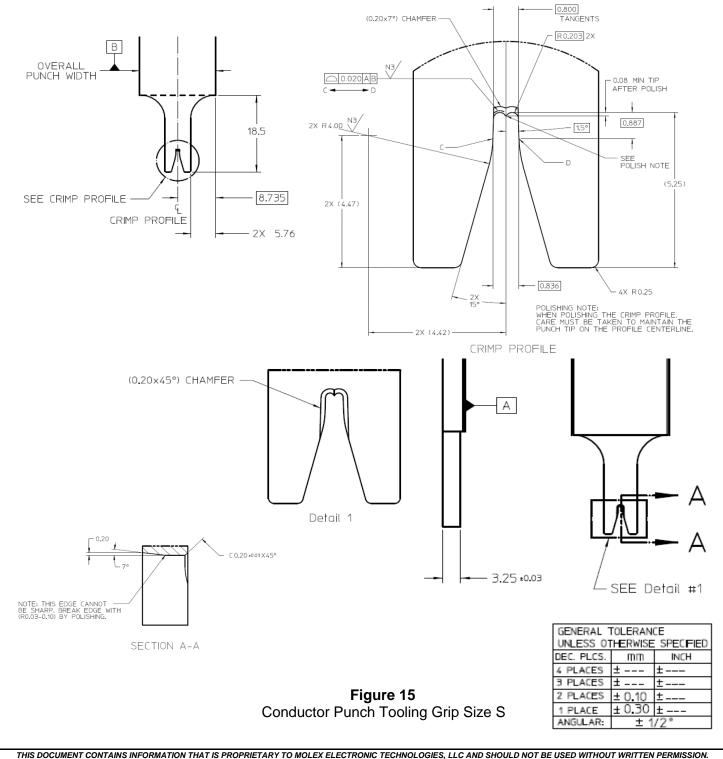


| THIS DOCUMENT CONTAINS IN COMMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LEC AND SHOULD NOT BE USED WITHOUT WATTEN PERMISS. |                         |              |                                                     |                       |                                |              |                 |  |  |
|----------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|--------------|-----------------------------------------------------|-----------------------|--------------------------------|--------------|-----------------|--|--|
| REVISION:                                                                                                                                    | EC INFORMATION:         | TITLE:       |                                                     |                       |                                |              | SHEET No.       |  |  |
|                                                                                                                                              | EC No: <b>633932</b>    | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |                                |              |                 |  |  |
| K                                                                                                                                            | DATE: <b>2020/03/23</b> |              |                                                     |                       |                                |              |                 |  |  |
| DOCUMENT                                                                                                                                     | NUMBER:                 | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY:                    | APPRO        | OVED BY:        |  |  |
| AS-560023-001                                                                                                                                |                         | PS           | 001                                                 | RGV                   | SMAHADIK                       | JCUAT        | ACERVAN         |  |  |
|                                                                                                                                              |                         |              |                                                     |                       | TEMPLATE FILENAME: APPLICATION | ON_SPEC[SIZE | _A4] (V.4).DOCX |  |  |



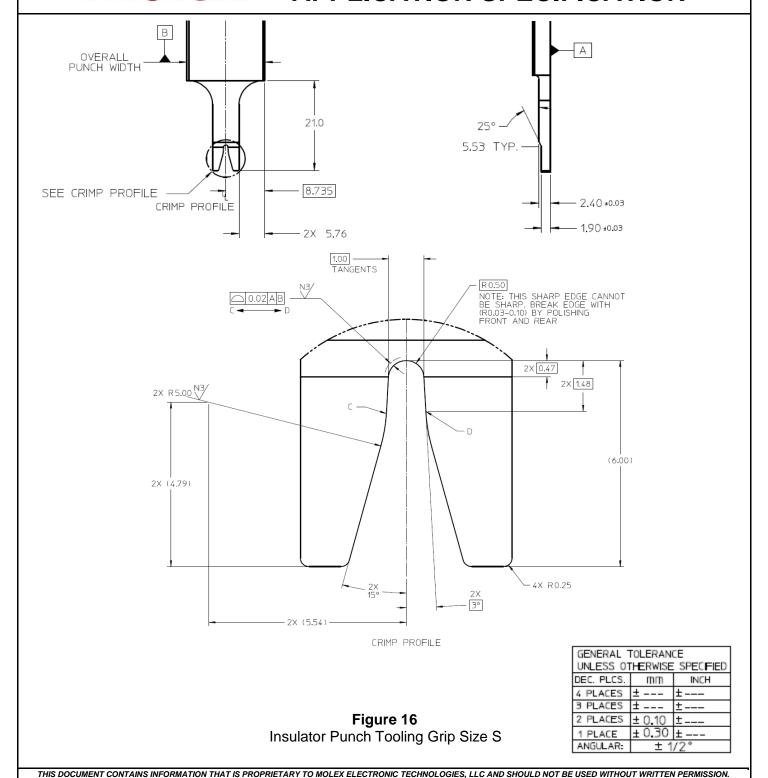


| REVISION:     | EC INFORMATION:                 | TITLE:       |                                                     | <u> </u>              |                                |              | SHEET No.       |  |  |
|---------------|---------------------------------|--------------|-----------------------------------------------------|-----------------------|--------------------------------|--------------|-----------------|--|--|
| K             | EC No: 633932  DATE: 2020/03/23 | СТ           | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |                                |              |                 |  |  |
| DOCUMENT      | NUMBER:                         | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY:                    | <u>APPR(</u> | OVED BY:        |  |  |
| AS-560023-001 |                                 | PS           | 001                                                 | RGV                   | SMAHADIK                       | JCUATACERVAN |                 |  |  |
|               |                                 |              |                                                     |                       | TEMPLATE FILENAME: APPLICATION | ON_SPEC[SIZE | _A4] (V.4).DOCX |  |  |



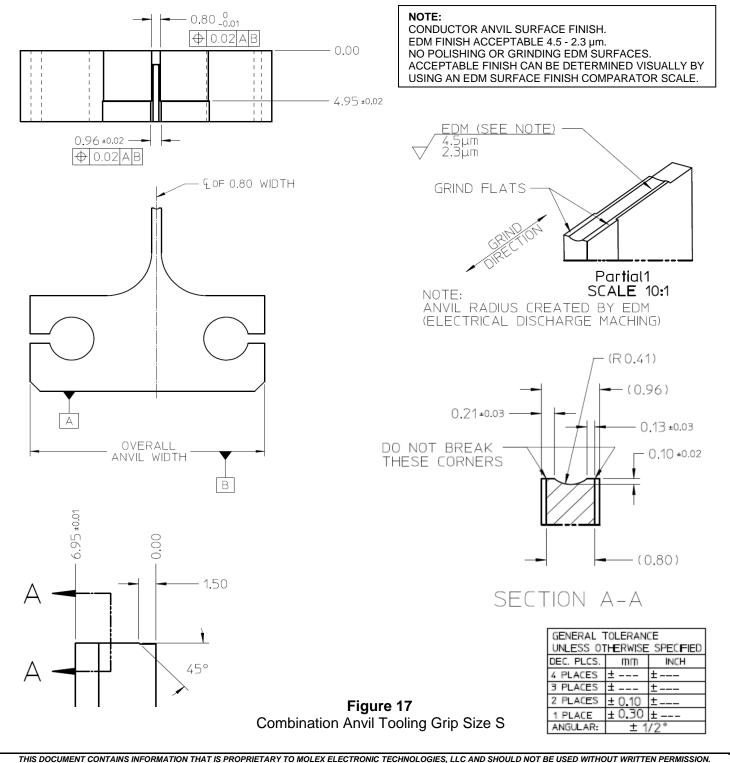

| <b>REVISION:</b> | EC INFORMATION:      | TITLE:       |                                                     |                       |                                |              | SHEET No.       |  |
|------------------|----------------------|--------------|-----------------------------------------------------|-----------------------|--------------------------------|--------------|-----------------|--|
|                  | EC No: <b>633932</b> | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |                                |              |                 |  |
| K                | DATE: 2020/03/23     |              |                                                     |                       |                                |              |                 |  |
| DOCUMENT         | ΓNUMBER:             | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY:                    | APPRO        | OVED BY:        |  |
| AS-560023-001    |                      | PS           | 001                                                 | RGV                   | SMAHADIK                       | ICHAT        | ACERVAN         |  |
| A3-300023-001    |                      | . 0          | 001                                                 | RGV                   | SWIAHADIK                      | JCUAI        | ACERVAIN        |  |
|                  |                      |              |                                                     |                       | TEMPLATE FILENAME: APPLICATION | ON_SPEC[SIZE | _A4] (V.4).DOCX |  |



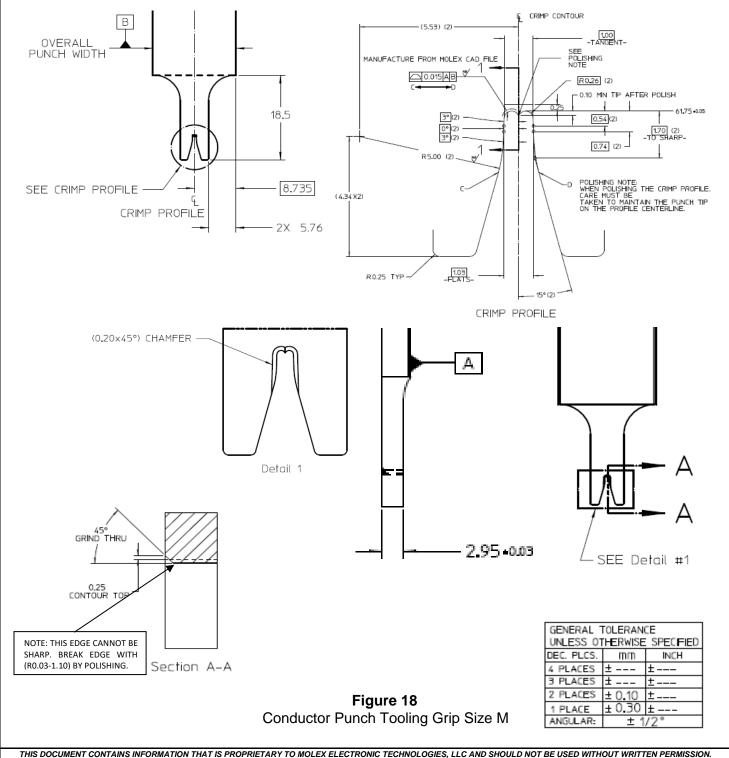

| REVISION:     | EC INFORMATION:         | TITLE:       |                                                     |                       | AND GROUD NOT BE GOLD WITH     |              | SHEET No.       |  |
|---------------|-------------------------|--------------|-----------------------------------------------------|-----------------------|--------------------------------|--------------|-----------------|--|
|               | EC No: <b>633932</b>    | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |                                |              |                 |  |
| K             | DATE: <b>2020/03/23</b> |              |                                                     |                       |                                |              |                 |  |
| DOCUMENT      | NUMBER:                 | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY:                    | APPR(        | OVED BY:        |  |
| AS-560023-001 |                         | PS           | 001                                                 | RGV                   | SMAHADIK                       | JCUAT        | ACERVAN         |  |
|               |                         |              |                                                     |                       | TEMPLATE FILENAME: APPLICATION | DN_SPEC[SIZE | _A4] (V.4).DOCX |  |




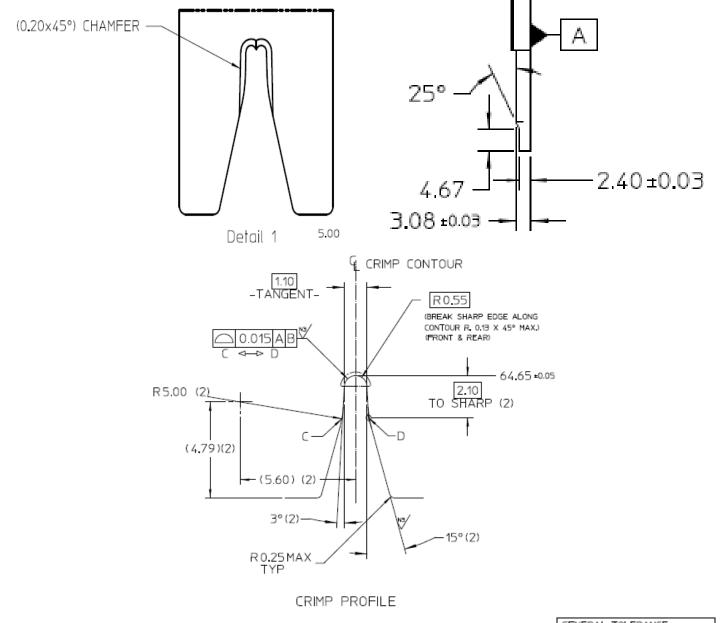


Figure 19
Insulator Punch Tooling Grip Size M


| GENERAL    |                            |      |  |  |  |  |  |  |
|------------|----------------------------|------|--|--|--|--|--|--|
|            | UNLESS OTHERWISE SPECIFIED |      |  |  |  |  |  |  |
| DEC. PLCS. | mm                         | INCH |  |  |  |  |  |  |
| 4 PLACES   | ±                          | ±    |  |  |  |  |  |  |
| 3 PLACES   | ±                          | ±    |  |  |  |  |  |  |
| 2 PLACES   | ± 0.10                     | ±    |  |  |  |  |  |  |
| 1 PLACE    | ± 0.30                     | ±    |  |  |  |  |  |  |
| ANGULAR:   | ± 1                        | /2°  |  |  |  |  |  |  |


| THIS DOCUME      | THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PE |              |                                                     |                       |                                |              |                 |  |  |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------|--------------|-----------------------------------------------------|-----------------------|--------------------------------|--------------|-----------------|--|--|
| <b>REVISION:</b> | <b>EC INFORMATION:</b>                                                                                                                 | TITLE:       | <u>'ITLE:</u>                                       |                       |                                |              |                 |  |  |
|                  | EC No: <b>633932</b>                                                                                                                   | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |                                |              |                 |  |  |
| K                | DATE: <b>2020/03/23</b>                                                                                                                |              |                                                     |                       |                                |              |                 |  |  |
| DOCUMENT         | NUMBER:                                                                                                                                | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY:                    | APPRO        | OVED BY:        |  |  |
| AS-560023-001    |                                                                                                                                        | PS           | 001                                                 | RGV                   | SMAHADIK                       | JCUAT        | ACERVAN         |  |  |
|                  |                                                                                                                                        |              |                                                     |                       | TEMPLATE FILENAME: APPLICATION | ON_SPEC[SIZE | _A4] (V.4).DOCX |  |  |




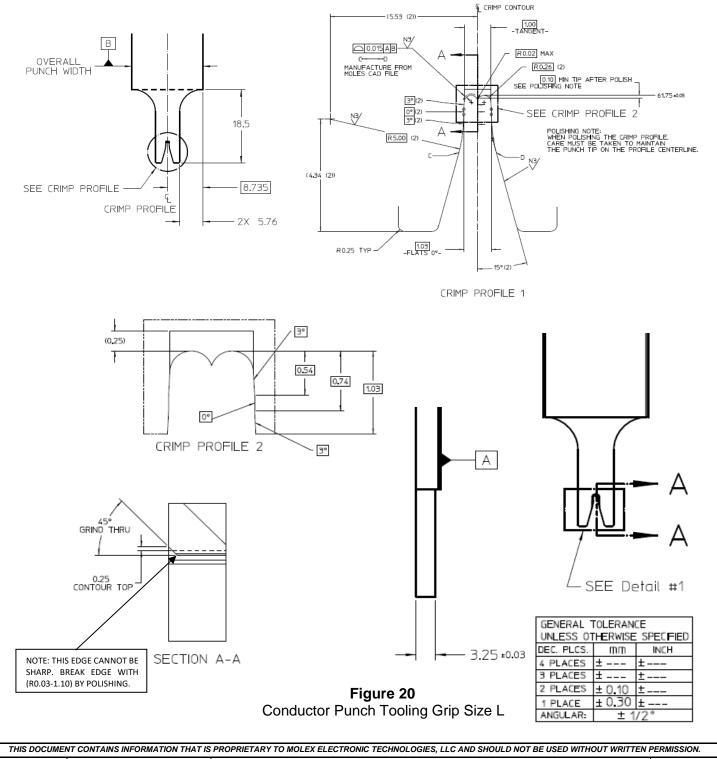

| REVISION:   EC INFORMATION:   EC No: 633932     DATE: 2020/03/23 | TITLE:<br>CT | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |                                |              |                 |  |  |
|------------------------------------------------------------------|--------------|-----------------------------------------------------|-----------------------|--------------------------------|--------------|-----------------|--|--|
| DOCUMENT NUMBER:                                                 | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY:                    | APPRO        | OVED BY:        |  |  |
| AS-560023-001                                                    | PS           | 001                                                 | RGV                   | SMAHADIK                       | JCUAT        | ACERVAN         |  |  |
|                                                                  |              |                                                     |                       | TEMPLATE FILENAME: APPLICATION | ON_SPEC[SIZE | _A4] (V.4).DOCX |  |  |

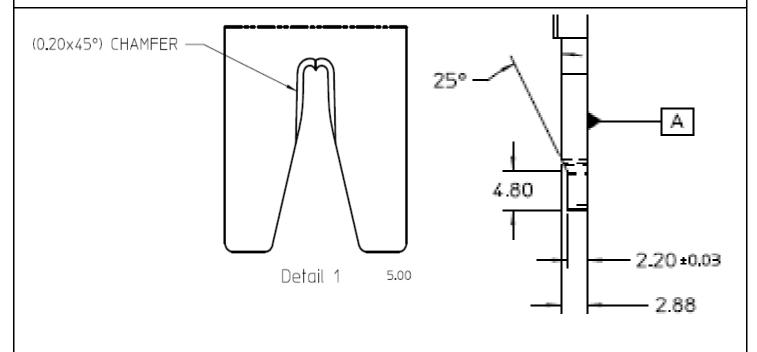

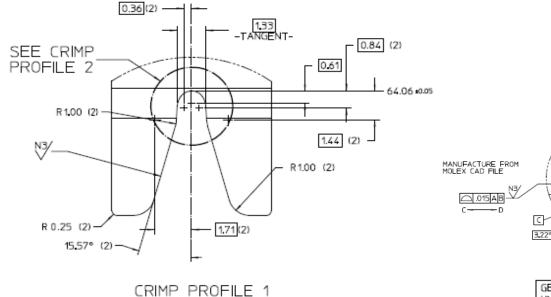

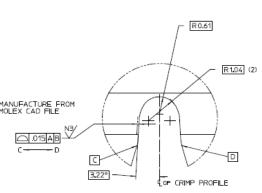


CRIMP PROFILE 2

| GENERAL TOLERANCE          |            |      |  |  |  |  |  |
|----------------------------|------------|------|--|--|--|--|--|
| UNLESS OTHERWISE SPECIFIED |            |      |  |  |  |  |  |
| DEC. PLCS.                 | mm         | INCH |  |  |  |  |  |
| 4 PLACES                   | ±          | ±    |  |  |  |  |  |
| 3 PLACES                   | ±          | ±    |  |  |  |  |  |
| 2 PLACES                   | ± 0.10     | ±    |  |  |  |  |  |
| 1 PLACE                    | $\pm 0.30$ | ±    |  |  |  |  |  |
| ANGULAR:                   | ± 1        | /2°  |  |  |  |  |  |

Figure 21 Insulator Punch Tooling Grip Size L


| THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMISSION. |                         |              |                                    |                       |                 |       |           |  |  |
|-------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------|--------------|------------------------------------|-----------------------|-----------------|-------|-----------|--|--|
| REVISION:                                                                                                                                       | <b>EC INFORMATION:</b>  | TITLE:       |                                    |                       |                 |       | SHEET No. |  |  |
|                                                                                                                                                 | EC No: <b>633932</b>    | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL |                       |                 |       |           |  |  |
| K                                                                                                                                               | DATE: <b>2020/03/23</b> |              | APPLICATION SPEC 18                |                       |                 |       |           |  |  |
| DOCUMENT                                                                                                                                        | NUMBER:                 | DOC<br>TYPE: | DOC<br>PART:                       | CREATED / REVISED BY: | CHECKED BY:     | APPRO | OVED BY:  |  |  |
| AS-560023-001                                                                                                                                   |                         | PS           | 001                                | RGV                   | SMAHADIK        | JCUAT | ACERVAN   |  |  |
| TEMPLATE FILENAME: APPLICATION_SPEC[SIZE                                                                                                        |                         |              |                                    |                       | _A4] (V.4).DOCX |       |           |  |  |

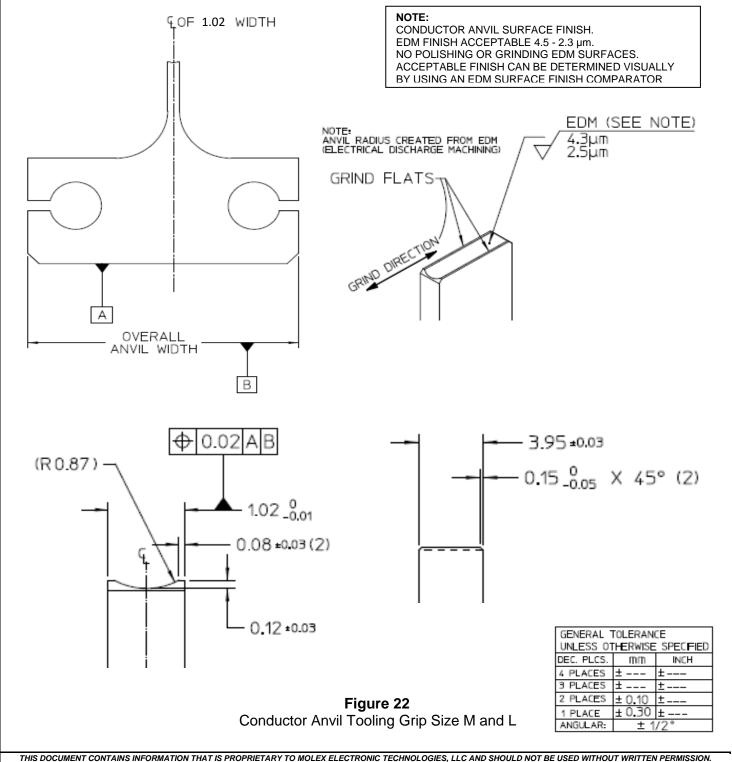

| REVISION:     | EC INFORMATION:         | TITLE:       |                                                     | ,,,                   | AND GROUD NOT BE GOLD WITH     |              | SHEET No.       |  |
|---------------|-------------------------|--------------|-----------------------------------------------------|-----------------------|--------------------------------|--------------|-----------------|--|
|               | EC No: <b>633932</b>    | CT           | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |                                |              |                 |  |
| K             | DATE: <b>2020/03/23</b> |              |                                                     |                       |                                |              |                 |  |
| DOCUMENT      | NUMBER:                 | DOC<br>TYPE: | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY:                    | APPRO        | OVED BY:        |  |
| AS-560023-001 |                         | PS           | 001                                                 | RGV                   | SMAHADIK                       | JCUAT        | ACERVAN         |  |
|               |                         |              |                                                     |                       | TEMPLATE FILENAME: APPLICATION | DN_SPEC[SIZE | _A4] (V.4).DOCX |  |

# molex

# **EX** APPLICATION SPECIFICATION

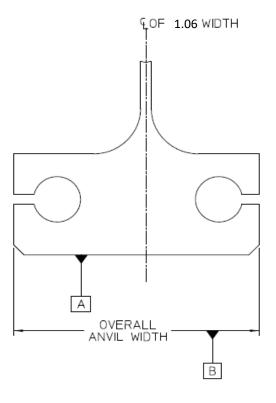

### NOTE:


CONDUCTOR ANVIL SURFACE FINISH.


EDM FINISH ACCEPTABLE 4.5 - 2.3 µm.

NO POLISHING OR GRINDING EDM SURFACES.

ACCEPTABLE FINISH CAN BE DETERMINED VISUALLY

BY USING AN EDM SURFACE FINISH COMPARATOR

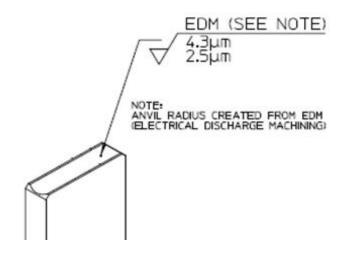

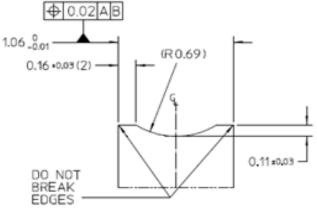

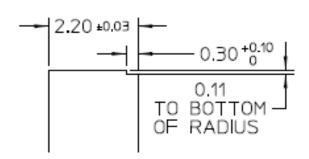



Figure 23
Insulator Anvil Tooling Grip Size M

| GENERAL TOLERANCE<br>UNLESS OTHERWISE SPECIFIED |        |      |  |  |  |  |
|-------------------------------------------------|--------|------|--|--|--|--|
| DEC. PLCS.                                      | mm     | INCH |  |  |  |  |
| 4 PLACES                                        | ±      | ±    |  |  |  |  |
| 3 PLACES                                        | ±      | ±    |  |  |  |  |
| 2 PLACES                                        | ± 0.10 | ±    |  |  |  |  |
| 1 PLACE                                         | ± 0.30 | ±    |  |  |  |  |
| ANGULAR:                                        | ± 1    | /2°  |  |  |  |  |

| THIS DOCUME | THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMISSION. |        |                                                     |                       |             |                 |           |  |  |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------|--------|-----------------------------------------------------|-----------------------|-------------|-----------------|-----------|--|--|
| REVISION:   | EC INFORMATION:                                                                                                                                 | TITLE: |                                                     |                       |             |                 | SHEET No. |  |  |
|             | EC No: <b>633932</b>                                                                                                                            | CT     | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |             |                 |           |  |  |
| K           | DATE: 2020/03/23                                                                                                                                |        |                                                     |                       |             |                 |           |  |  |
| DOCUMENT    | DOCUMENT NUMBER:                                                                                                                                |        | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY: | APPRO           | OVED BY:  |  |  |
| AS-         | PS                                                                                                                                              | 001    | RGV                                                 | SMAHADIK              | JCUAT       | ACERVAN         |           |  |  |
|             | TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A4                                                                                                     |        |                                                     |                       |             | _A4] (V.4).DOCX |           |  |  |

# molex

# **APPLICATION SPECIFICATION**

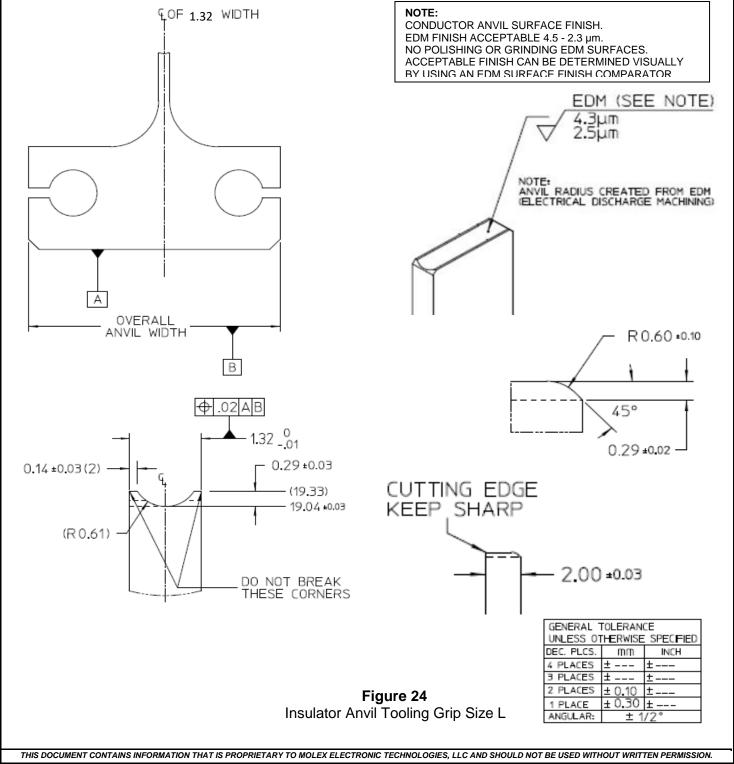

| REVISION:     | EC INFORMATION:         | TITLE:           |                                    |                       |                                |               | SHEET No.              |  |
|---------------|-------------------------|------------------|------------------------------------|-----------------------|--------------------------------|---------------|------------------------|--|
|               | EC No: <b>633932</b>    | CT               | CTX50 UNSEALED RECEPTACLE TERMINAL |                       |                                |               |                        |  |
| K             | DATE: <b>2020/03/23</b> | APPLICATION SPEC |                                    |                       |                                |               | <b>21</b> of <b>24</b> |  |
| DOCUMENT      | NUMBER:                 | DOC<br>TYPE:     | DOC<br>PART:                       | CREATED / REVISED BY: | CHECKED BY:                    | <u>APPR</u> ( | OVED BY:               |  |
| AS-560023-001 |                         | PS               | 001                                | RGV                   | SMAHADIK                       | JCUAT         | ACERVAN                |  |
|               | ·                       |                  |                                    |                       | TEMPLATE FILENAME: APPLICATION | ON_SPEC[SIZE  | E_A4] (V.4).DOCX       |  |



### 7.0 CRIMP STRAIGHTNESS

A sample method for maintaining crimp straightness is shown in Figure 22 below.

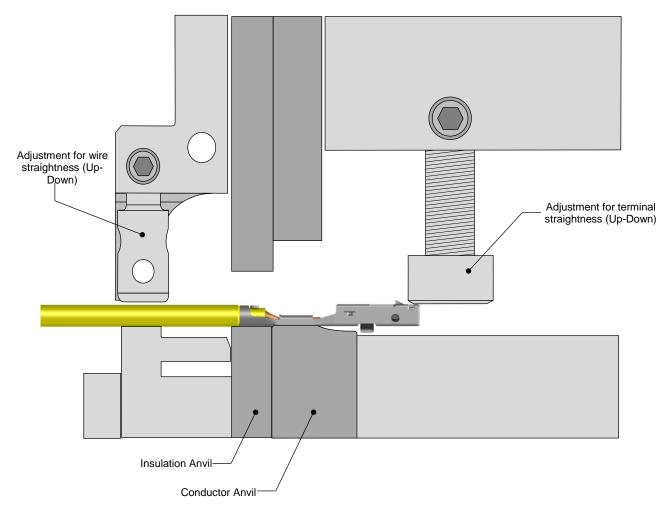


Figure 25

| THIS DOCUME      | THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMISSION. |        |                                                     |                       |                                |              |                 |  |  |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|--------|-----------------------------------------------------|-----------------------|--------------------------------|--------------|-----------------|--|--|
| <b>REVISION:</b> | EC INFORMATION:                                                                                                                                 | TITLE: |                                                     |                       |                                |              | SHEET No.       |  |  |
|                  | EC No: <b>633932</b>                                                                                                                            | CT     | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |                                |              |                 |  |  |
| K                | DATE: 2020/03/23                                                                                                                                |        |                                                     |                       |                                |              |                 |  |  |
| DOCUMENT         | DOCUMENT NUMBER:                                                                                                                                |        | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY:                    | APPRO        | OVED BY:        |  |  |
| AS-560023-001    |                                                                                                                                                 | PS     | 001                                                 | RGV                   | SMAHADIK                       | JCUAT        | ACERVAN         |  |  |
|                  |                                                                                                                                                 |        |                                                     |                       | TEMPLATE FILENAME: APPLICATION | DN_SPEC[SIZE | _A4] (V.4).DOCX |  |  |



### **8.0 APPLICATION TOOLING**

Application Tooling for the CTX50 Receptacle Terminal can be obtained directly from Molex.

To find the proper and latest Molex Application Tooling

- 1. Go to <a href="http://www.molex.com">http://www.molex.com</a>
- 2. Enter the terminal / connector part number into the search box and select the "Go" button.
  - a. Molex part numbers can also be found by searching on the product description.
- 3. Review the Application Tooling available on the right side of the product window.
  - a. It may be necessary to scroll down on the right side of the terminal / connector product page to view all the tooling options.
  - b. Hand tools and manual type tools require the loose terminal / connector part number to be used in the search.
  - c. Applicator or semi-automatic type tools require the reeled terminal / connector part number to be used in the search.
- 4. Select the tool part number link
- 5. Review the tooling page for general tool information
- 6. Open the link for the Application Tooling Specification (ATS) (located on the left under *Specifications & Other Documents*) for additional details such as:
  - Termination specifications: crimp height, pull force, wire strip length, insulation diameter, etc.
  - b. Tool information: tool diagram, tool parts list, repair parts, perishable parts list.
- 7. Order Molex Application Tooling through your preferred distributor

### Notes:

- 1. Hand crimp tooling can only be used with certain wires and terminal part numbers. Check the Application Tooling Specification Sheet on the Molex website for details.
- 2. Application Tooling product numbers are subject to change without prior notice. Customers are advised to check the Molex website for the most up-to-date information.
- 3. Molex FineAdjust™ and MiniMac™ Application Tooling requires the use of left payoff ("D" Wind) parts.

| THIS DOCUME             | THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMISSION. |        |                                                     |                                |              |                  |           |  |  |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|--------|-----------------------------------------------------|--------------------------------|--------------|------------------|-----------|--|--|
| <b>REVISION:</b>        | <b>EC INFORMATION:</b>                                                                                                                          | TITLE: |                                                     |                                |              |                  | SHEET No. |  |  |
|                         | EC No: <b>633932</b>                                                                                                                            | CT     | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                                |              |                  |           |  |  |
| K                       | DATE: <b>2020/03/23</b>                                                                                                                         |        |                                                     |                                |              |                  |           |  |  |
| DOCUMENT                | DOCUMENT NUMBER:                                                                                                                                |        | DOC<br>PART:                                        | CREATED / REVISED BY:          | CHECKED BY:  | APPRO            | OVED BY:  |  |  |
| AS-560023-001           |                                                                                                                                                 | PS     | 001                                                 | RGV                            | SMAHADIK     | JCUAT            | ACERVAN   |  |  |
| TEMPLATE FILENAME: APPL |                                                                                                                                                 |        |                                                     | TEMPLATE FILENAME: APPLICATION | ON_SPEC[SIZE | E_A4] (V.4).DOCX |           |  |  |



# molex APPLICATION SPECIFICATION

| <b>Application</b> | Spec | Revision | Log |
|--------------------|------|----------|-----|
|--------------------|------|----------|-----|

| Change                                                                                                                                                                                                                                                                                                                                                                                                                                               | Ву              | Date       | Revision<br>Number |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|------------|--------------------|
| Added min tip dimension and radius of tip for small grip conductor punch and changed value to 0.10 for medium and large grip conductor punches. All crimp tooling drawings updated to reflect current AH tooling. Added dimensions for Anvil Step of crimp tooling. Insulation Grip Step tolerance increased to ±0.05. Crimp Bulge (balloon 17) changed to 1.07 MAX. Table 3: Removed rolling requirement. Twisting requirement increased to 2° MAX. | J. Burgio       | 07/19/2016 | D                  |
| Addition of new small grip part number specifications, crimp tooling views, and crimp bulge requirements. Updates to Figure 4, Figure 12, Table 2, Table 3, and Section 6.                                                                                                                                                                                                                                                                           | J. Burgio       | 11/03/2016 | E                  |
| Corrected missing flat to flat dimension on Figures 19 & 20. Addition of FLR13Y-A wire in Table 2.                                                                                                                                                                                                                                                                                                                                                   | J. Burgio       | 12/20/2016 | E1                 |
| Insulator punch tooling thickness reduced for P/N 560023-0444/0445; Figure 16. Revision is "steel safe".                                                                                                                                                                                                                                                                                                                                             | J. Burgio       | 02/23/2017 | E2                 |
| Addition of L-grip Au terminals (Table 1 & Table 2). A3Z wire validated for L-grip Sn terminals (Table 2).                                                                                                                                                                                                                                                                                                                                           | J. Burgio       | 5/16/2017  | F                  |
| Adding PSA wire: FTP: 00949_10_00766 Rear Bell mouth (Balloon 5a) tolerance on grip code L changed from 0.05 to 0.10                                                                                                                                                                                                                                                                                                                                 | F. Petit-Pierre | 12/06/2017 | G                  |
| Page 8: Modification of A3Z CCH in Table 3 - FTP: 00949_10_00766 is equivalent to 0.35mm2 T3ZHID wire                                                                                                                                                                                                                                                                                                                                                | F. Petit-Pierre | 05/02/2018 | Н                  |
| Removed obsoleted S-grip part number 560023-0422/0424. Released Au S-grip. Added UL10086, UL10588, UL10316, UL 1332 wires, number of strands column and outer diameter of wire column to table 2. Cleaned up table 1 and 3. Edited crimp tooling figures, Edited front bell mouth value. Added EDM finish notes to anvil sheets.                                                                                                                     | S. Mahadik      | 09/27/2018 | J                  |
| Added FHLR9Y wire, number of strands column and outer diameter of wire column to table 2                                                                                                                                                                                                                                                                                                                                                             | B.Skantharaju   | 02/17/2020 | J1                 |
| Updated missed information on Terminal straightness from Rev J in page 2                                                                                                                                                                                                                                                                                                                                                                             | B.Skantharaju   | 02/26/2020 | J2                 |
| Updated to latest template format, Added conductor grip and wire straightness callout                                                                                                                                                                                                                                                                                                                                                                | RGV             | 03/12/2020 | K                  |

| THIS DOCUME | THIS DOCUMENT CONTAINS INFORMATION THAT IS PROPRIETARY TO MOLEX ELECTRONIC TECHNOLOGIES, LLC AND SHOULD NOT BE USED WITHOUT WRITTEN PERMISSION. |        |                                                     |                       |             |                 |           |  |  |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------|--------|-----------------------------------------------------|-----------------------|-------------|-----------------|-----------|--|--|
| REVISION:   | EC INFORMATION:                                                                                                                                 | TITLE: |                                                     |                       |             |                 | SHEET No. |  |  |
|             | EC No: <b>633932</b>                                                                                                                            | CT     | CTX50 UNSEALED RECEPTACLE TERMINAL APPLICATION SPEC |                       |             |                 |           |  |  |
| K           | DATE: 2020/03/23                                                                                                                                |        |                                                     |                       |             |                 |           |  |  |
| DOCUMENT    | DOCUMENT NUMBER:                                                                                                                                |        | DOC<br>PART:                                        | CREATED / REVISED BY: | CHECKED BY: | APPRO           | OVED BY:  |  |  |
| AS-         | PS                                                                                                                                              | 001    | RGV                                                 | SMAHADIK              | JCUAT       | ACERVAN         |           |  |  |
|             | TEMPLATE FILENAME: APPLICATION_SPEC[SIZE_A4                                                                                                     |        |                                                     |                       |             | _A4] (V.4).DOCX |           |  |  |